







DAILY OPERATION



- 1 Place strainer and scrap basket into the dishwasher. Make sure to line up arrows. 
- 2 Close the door. Push **POWER** button. 
- 3 When fill is complete, the readout will display **READY**.
- 4 Select the **WASH CYCLE**: 1, 2, 4, 6 minutes. To load a dishrack, open the door and slide the rack in the machine. 
- 5 Close the door, the machine will start automatically. The **PLAY** button turns blue, and a progress bar will appear at the bottom of the screen. 
- 6 Once the screen shows a check mark and reads **CYCLE COMPLETED**, the dishrack may be removed. 
- 7 To power off machine and drain, hold the **POWER** button down for 5 seconds. 





Wash Cycle

- Wash 
- Rinse 
- Condense (Ventless) 
- Complete 

DAILY CLEANING




- 1 Spray down the inside of the machine and scrub any hard-to-reach spots with a clean, damp cloth.
- 2 Remove **rack track**, **strainer**, **scrap basket** and **ASR basket*** to clean and rinse.
- 3 Make sure the **upper** and **lower wash and rinse arms** rotate freely and are clear of any obstructions.
- 4 Re-assemble the machine.
 - a. Replace **strainer** and **scrap basket**,
 - b. Install **wash and rinse arms** (if removed)
 - c. Replace **rack track**
 - d. Replace **ASR basket** if necessary
- 5 Close the door. Hold the **POWER** button for 5 seconds to shut down. Power button will turn half green and lights will turn off when machine is fully drained. 
- 6 After machine is drained, open hood and clean **inside of the machine** with a damp cloth.
- 7 If there is water remaining in the tank, drain remaining water by holding down the **DRAIN** button for 3 seconds while the machine is off. 
- 8 After cleaning, wipe down **machine exterior** with a damp cloth. Open machine door.

Blue Bold Text = Clean Daily

REPLACING CHEMICALS

1. When the machine is out of **SANITIZER** or **DETERGENT** an alarm will sound & the machine will automatically pause operation. **SANITIZER EMPTY** or **DETERGENT EMPTY** and an **ICON** display on the machine control screen.
2. Replace the sanitizer or detergent. **NOTE:** Use only commercial detergents & sanitizers with the AM16.
3. Chemical pumps will prime automatically once the **ENTER** button is pressed.

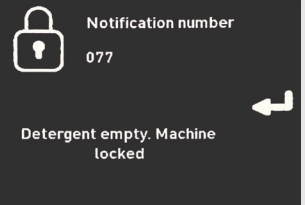

OPERATIONAL TIPS – GET THE MOST OUT OF YOUR DISHWASHER



PRE-SCRAP DISHES



USE COMMERCIAL DISHWASHER CHEMICALS ONLY

Do not use any other chemicals with the dishmachine. Use PPE for handling.




DELIME THE MACHINE

The unit will alert you when deliming is required. When prompted, follow the instructions on the display. *Note: Delime instructions will vary based on model. Scan QR code for more information.*

SCAN TO WATCH DELIME VIDEO



PROPER RACKING WILL PROVIDE THE BEST CLEANING RESULTS.

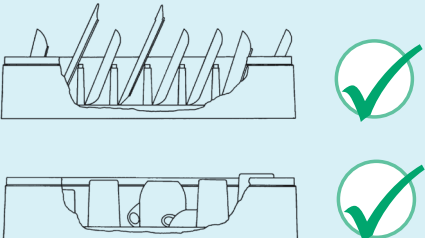

DO NOT OVERLOAD RACK