HOBART PW10eR/PW20eR/PWVeR Prep Washer | Delime Instructions

Deliming Your PW Prep Washer for Optimal Results

The Hobart PW Prep Washer is equipped with a delime notification that will appear on the display when deliming is recommended for the machine.






PREPARING Your PW Prep Washer for the Delime Cycle

REMOVE RACK, scrap basket and strainer screen(s) from the machine and clean under warm soapy water, removing any food soils; rinse thoroughly.



REINSTALL CLEANED STRAINER SCREEN(S). scrap basket and rack into the machine and close the door.

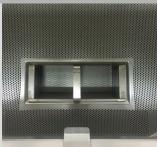

LOCATE YOUR DELIMING CHEMICAL

> (provided by your chemical supplier) Deliming chemical will be dosed automatically. However, check chemical bottle level to ensure chemical is present.



DISABLE THE **DETERGENT FEEDER**

chemical system according to the chemical manufacturer's recommendation. This will prevent the addition of detergent during the deliming operation.



How to MANUALLY Activate the Delime Cycle

Press the v button to begin.



Select "Manager Menu" by pressing button.



Enter the security code, "1001" for the machine using the following steps:

A for "1"

for "0"

for "0"

A for "1" to go to step 4



Use the button to select "Delime Now" from the Manager Menu. Follow steps 5-8 to complete process.



How to INITIATE the Delime Cycle When Prompted

The display will read, "DELIME **RECOMMENDED - Would you like** to delime now?" Select YES by pressing the volution until the > symbol is shown to the left of **YES** and press the **button**.



"DELIME INITIATED" will appear on the display. Press 🛍 to enter the delime mode. The machine will drain and refill with fresh water. This will take sometime to complete.



INSPECT THE INTERIOR OF THE MACHINE. If necessary, another delime cycle can be initiated by entering the **Manager Programming Mode** (repeat steps 1-4 above).



REPLACE RACK and leave door open for machine to air dry.

> Reference your Hobart PW Owner's Manual for more information.

